TH-2050-VFM

Installation Instructions

telehook™

Flat Screen Wall Mount | Full Motion

Step 7. Cable Management

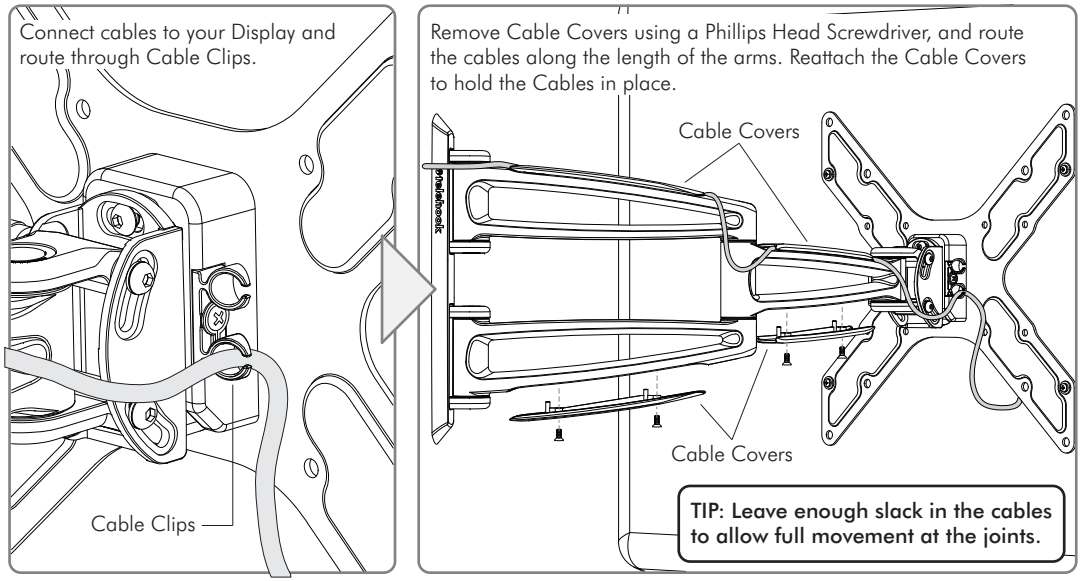
Connect cables to your Display and route through Cable Clips.
Cable Clips
Remove Cable Covers using a Phillips Head Screwdriver, and route the cables along the length of the arms. Reattach the Cable Covers to hold the Cables in place.
Cable Covers
Cable Covers
TIP: Leave enough slack in the cables to allow full movement at the joints.

Step 8. Tilt Adjustment

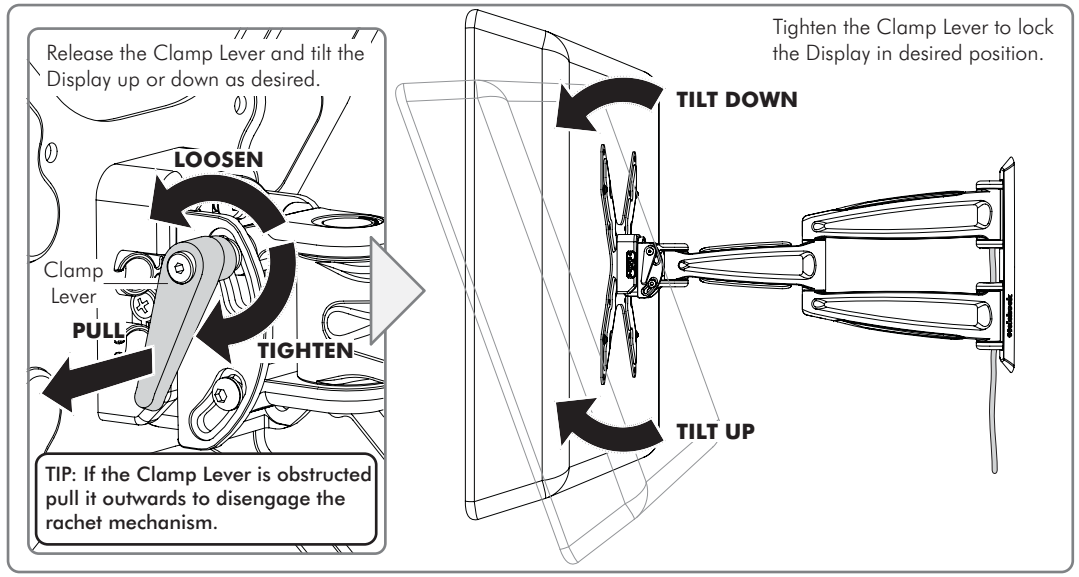
Release the Clamp Lever and tilt the Display up or down as desired.
LOOSEN
Clamp Lever
PULL
TIGHTEN
TIP: If the Clamp Lever is obstructed pull it outwards to disengage the rachet mechanism.
Tighten the Clamp Lever to lock the Display in desired position.
TILT DOWN
TILT UP

Installation Complete

Your Telehook Wall Mount Articulated Arm installation is complete and ready for use.

Component Checklist

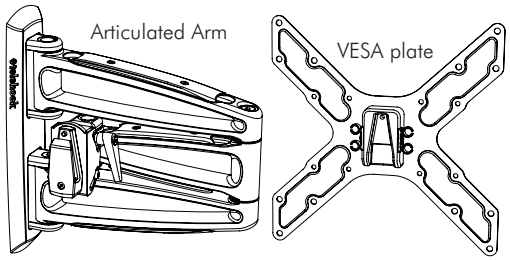


Drilling Guide

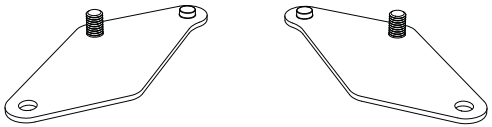
Extension Plate A (x2)

Extension Plate B (x2)

TOOLS REQUIRED:

- Power Drill
- Phillips Head Screwdriver
- Spirit Level
- 5mm (3/16") Drill Bit
- 10mm (3/8") Masonry Drill Bit
- 13mm (1/2") Socket Wrench or Shifter
- 14mm (9/16") Socket Wrench or Shifter

Hardware

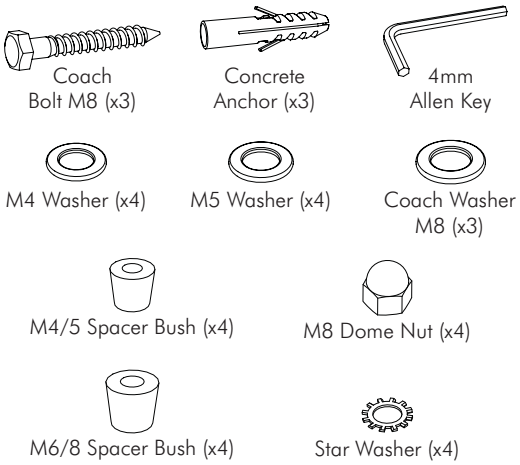

Mounting Screws

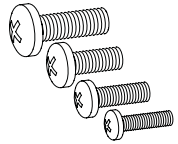
M8x16mm / M8x45mm (x4 each)
M6x16mm / M6x30mm (x4 each)
M5x16mm / M5x25mm (x4 each)
M4x16mm / M4x25mm (x4 each)

IMPORTANT INFORMATION

! **IMPORTANT - Install Telehook Wall Mount as per Installation Instructions.**

! Telehook Wall Mount supports Displays weighing up to 35kg (77lbs), with VESA hole configurations:

- 100x100mm (4"x4")
- 200x100mm (8"x4")
- 200x200mm (8"x8")
- 300x200mm (12"x8")
- 300x300mm (12"x12")
- 400x400mm (16"x16") - using the extensions plates supplied.

! The Manufacturer accepts no responsibility for incorrect installation.

Step 1. Check Components

Check you have received all parts against the Component Checklist and Hardware above.

atdec

As TFT Manufacturers are constantly releasing new monitor models, Atdec does not accept responsibility if the VESA mounting does not comply with the international standards.
Due to continuing product development, the manufacturer reserves the right to alter specifications without notice. Published: 11.11.09 ©

Step 2. Locate Drilling Position

Choose the location of your Telehook Wall Mount, ensuring that the wall is structurally sound (for a timber stud wall, locate the stud using a stud detection device). Use the Drilling Guide to mark out the hole centres.

Un-fold the Drilling Guide and open the Dust Collector.

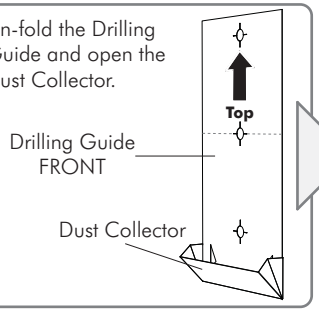

Peel away the backing from the double-sided adhesive tape.

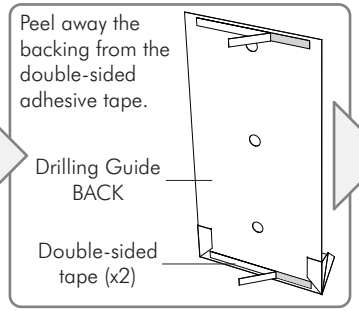

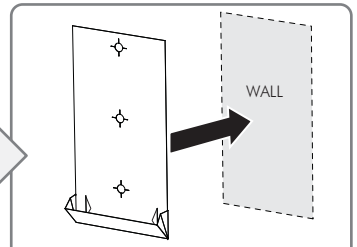

Position the Drilling Guide vertically onto the wall using a spirit level.

Step 3. Attaching the Articulated Arm to the Wall

Timber Stud Wall
- Using the Drilling Guide, drill three 5mm ($^3/_{16}$") diameter holes, 50mm (2") deep.
- Secure the Mouting Plate to the wall using the Coach Bolts and Coach Washers supplied.

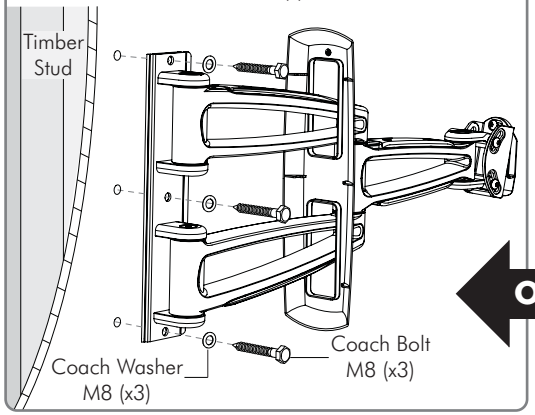

OR

Masonry Wall
- Using the Drilling Guide, drill three 10mm ($^3/_8$") diameter holes, 50mm (2") deep.
- Secure the Mouting Plate to the wall using the Coach Bolts, Coach Washers and Anchors supplied.

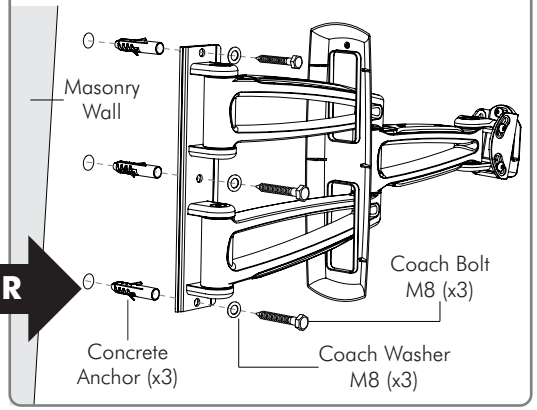

Step 4. Fasten Extension Plates to the VESA Plate (optional)

Only use the Extension Plates if the Display you wish to mount has a 400x400mm VESA hole mounting configuration.
If not, skip to Step 5.

- Locate each Extension Plate onto the VESA Plate (see right).
- Position the Star Washers over each bolt.
- Secure the Extension Plates in position by tightening the Dome Nuts firmly using a 14mm ($^9/_{16}$") Socket Wrench or Shifter.

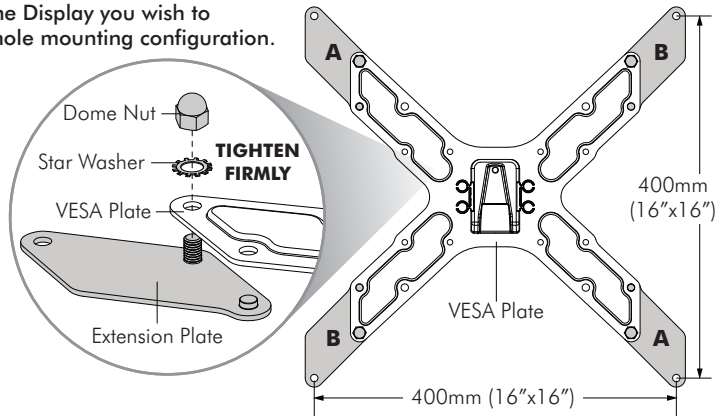

Step 5. Attaching the VESA Plate to your Display

Choose appropriate Mouting Screws and Washers from the Hardware supplied to suit your Display.

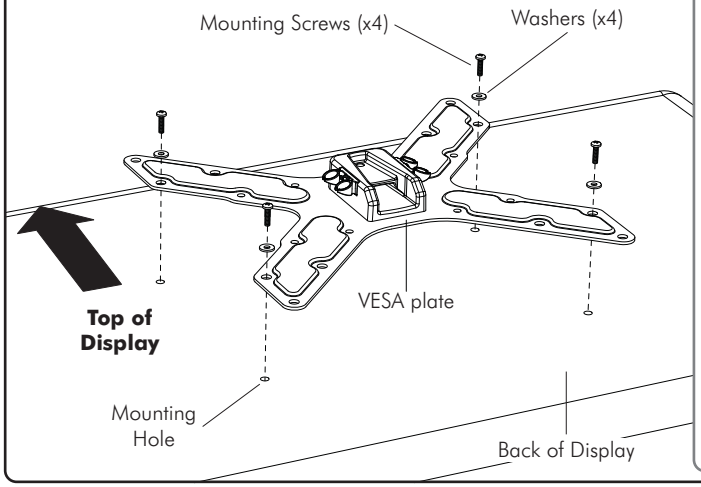

Recessed Mounting Holes or **Display with a Curved Rear Panel**

If the Mounting Holes are recessed into the back of the Display, or the Display has a curved rear panel, use the appropriate Spacer Bushes supplied to pack the Mounting Holes.
NOTE: Ensure the VESA plate is securely fixed to the display.

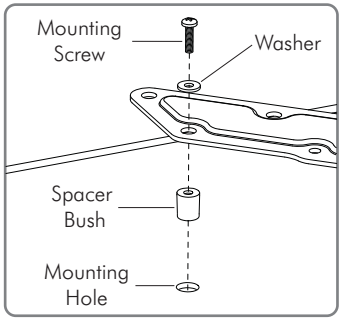

Step 6. Attaching your Display to the Articulated Arm

(required)

IMPORTANT:
Use the 4mm Allen Key to loosen the Security Screw until flush with the Quick-release Hook (do not remove).

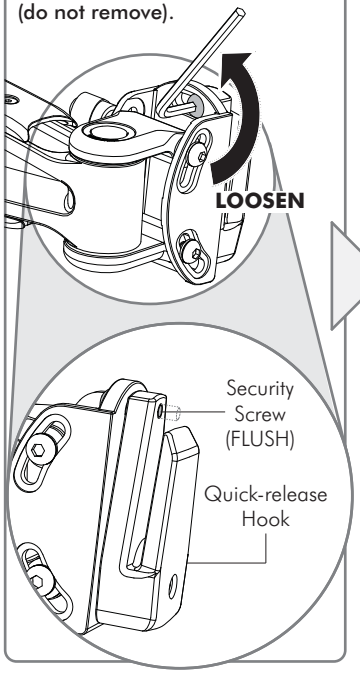

Slide the VESA plate onto the Quick-release Hook.

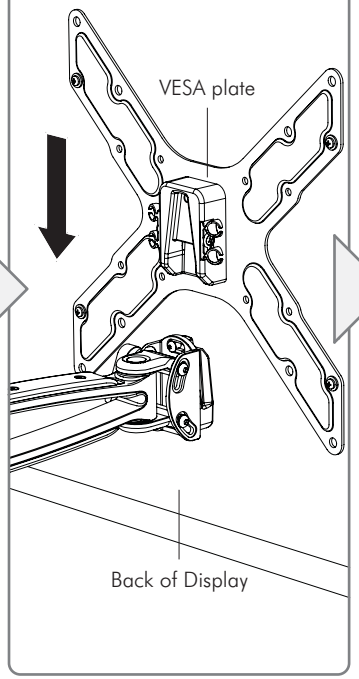

Rotate the Display into a Horizontal position as required.